


## Installation Guide FR2022Lid

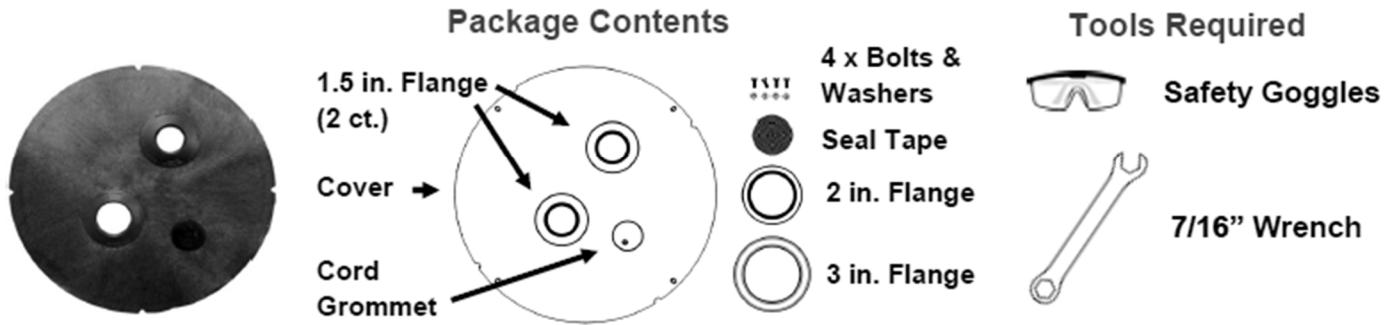

### Installation:

**Note:** The following serves only as a general installation guide. Please refer to your state and local plumbing regulations for details pertaining to your system's design, installation, and maintenance requirements.

- **Unplug the Pump:** Disconnect the pump from the power source.
- **Remove Components:** Detach pipes and remove the cord grommet from the cover.
- **Apply Seal Tape:** Apply seal tape to the basin rim inside the bolt circle.
- **Thread Power Cord:** Pull the pump's power cord through the cover's cord hole.
- **Position the Cover:** Slide the cover over the pump's discharge pipe through the discharge opening.
- **Secure the Cover:** Bolt the cover down with the discharge pipe centered in the discharge opening. Do not overtighten. Slide the discharge pipe flange over the discharge pipe and snap it into place on the cover.
- **Vent Pipe Installation:** Slide the vent pipe flange up over your vent pipe. Position the vent pipe in the center of the vent opening, extending into the basin at least one inch. Ensure the vent pipe is self-supporting as the flange will not support it. Snap the vent flange into the cover.
- **Manage Power Cord:** Pull the pump's power cord through the cord opening, removing any slack inside the basin. Insert the cord through the cord hole in the cord grommet and press the grommet into the cover.
- **Complete Plumbing:** Install the check valve and the rest of your discharge plumbing to complete the installation.

