


Installation Guide FR22Basin



Package Contents

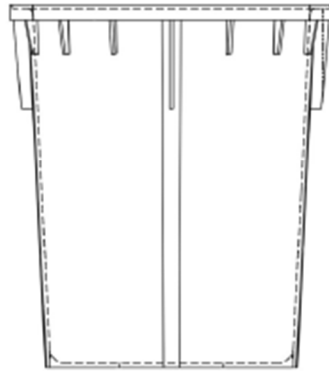

Tools Required



Safety Goggles



Tape Measure



Shovel

Installation:

Note: The following serves only as a general installation guide. Please refer to your state and local plumbing regulations for details pertaining to your system's design, installation, and maintenance requirements.

1. **Excavation:** Dig a hole large enough to accommodate the basin, backfill material, and inlet piping.
2. **Prepare the Base:** Add 4 to 6 inches of clean backfill material or concrete to the bottom of the hole. Ensure the base is level, compacted, and smooth.
3. **Position the Basin:** Place the basin in the hole and check that it is level.
4. **Backfill:** Carefully backfill around the basin with naturally rounded gravel or stone (larger than 3/8 inch and smaller than 3/4 inch in diameter).
5. **Connect Piping:** Connect all required piping as needed.
6. **Finish the Floor:** Complete the floor around the basin as required.

